


MODEL 20755x50B

REPAIR PARTS

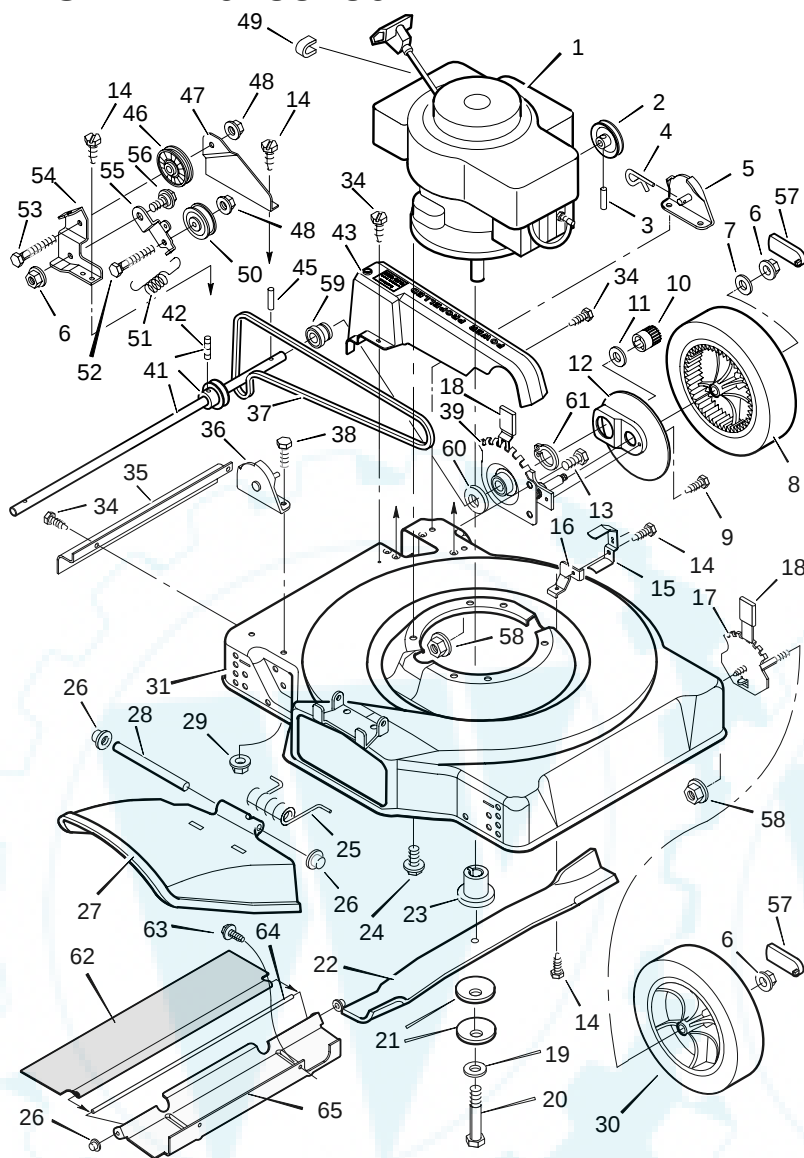


24	Bolt, Engine	25x6
25	Spring, Torsion	166x5
26	Push On Cap	28x42
27	Deflector, Chute	42919
28	Rod	215x11 Z
29	Nut	15x82
30	Wheel and Tire, Front	672213
31	Housing	70133
34	Screw	26x245
35	Guard, Axle	71034
36	Bracket, Right Handle	42712E700
37	Belt, Briggs & Stratton	37x72
38	Bolt	1x38
39	Height Adjuster, Left	401023
	Height Adjuster, Right	401022
41	Axle, Pulley & Setscrew	71466
42	Setscrew	23x50
43	Belt Guard, Briggs	71024
45	Pin, Drive	43629
46	Pulley, Idler	71905
47	Support, Idler	71046 Z
48	Nut	15x88
49	Stop, Rope	42189
50	Pulley, Idler	71054
51	Spring, Extension	165x94
52	Bolt, Hex	1x141
53	Bolt, Hex	1x102
54	Bracket, Idler	71045 Z
55	Arm, Idler	71026 Z
56	Bolt, Shoulder	9x48
57	Cap, Hub	672216
58	Nut, Flange	15x68
59	Bearing and Retainer	70250
60	Washer, Belleville	17x178
61	Retainer Ring	11x24
62	Guard, Rear	71798
63	Screw	26x274
64	Rod, Guard	71800 Z
65	Extension, Rear	71746E701
--	Instruction Book	F-97510

1	Engine	-----	12	Cover, Dust	71032
2	Pulley	71434	13	Bolt, Hex	1x85
3	Pin, Spring	32x64	14	Screw	26x214
4	Pin, Hair	31x10	15	Guide, Belt	71051 Z
5	Bracket, Left Handle	42713E700	16	Belt Guide, Briggs	71049 Z
6	Nut	15x84	17	Height Adjuster, Front	401025
7	Washer	17x169	18	Grip	43394
8	Wheel, Drive	672208	19	Washer	17x124
9	Screw	26x221	20	Bolt	1x143
10	Gear, Right Pinion	43630	21	Washer, Belleville	17x137
	Gear, Left Pinion	43631	22	Blade	42225E701
11	Washer	17x139	23	Adapter, Blade	71057

MODEL 20755x50B

REPAIR PARTS

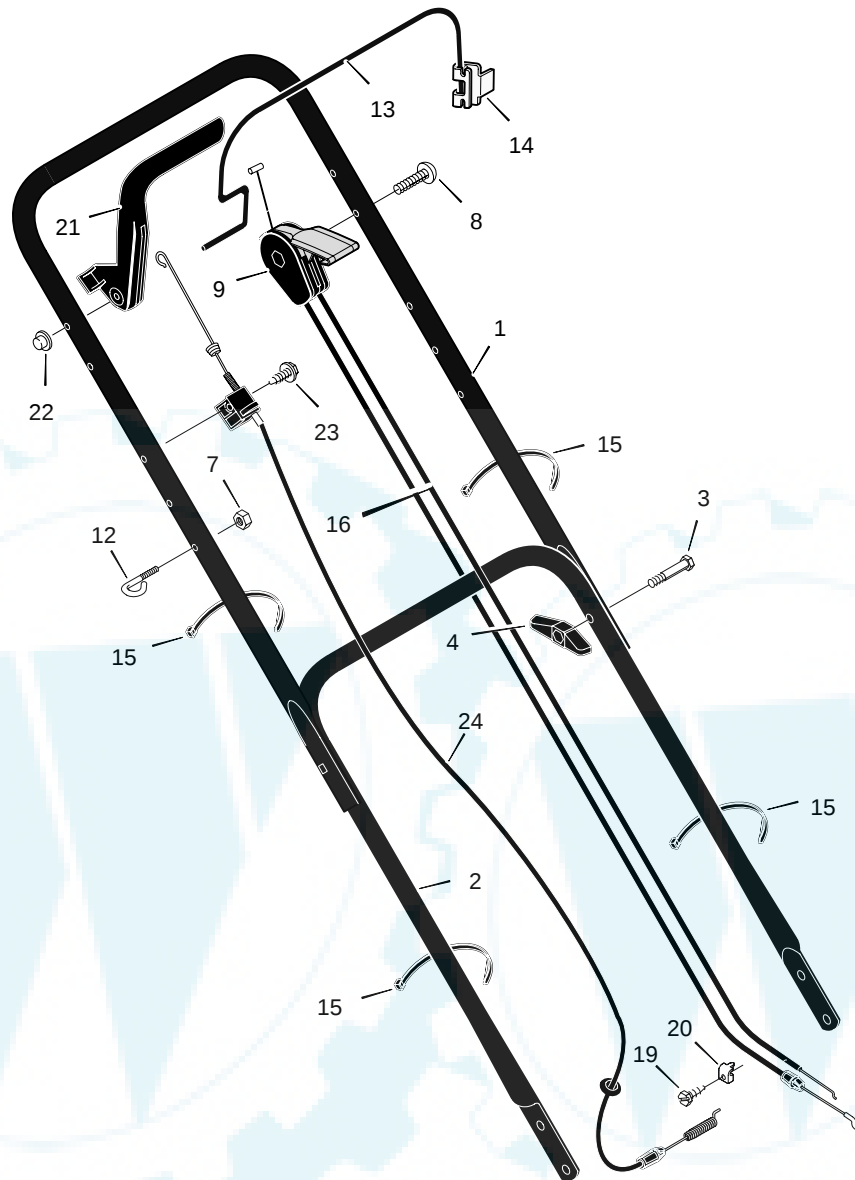

1	Handle, Upper (Black)	71581E724	12	Guide, Rope	43956	21	Lever, Drive	43722
2	Handle, Lower (Black)	672207E724	13	Stop Lever - Straight	672066E245	22	Push On Cap	28x48
3	Bolt	2x77	14	Bracket, Stop Lever	43628 BC	23	Screw	26x256
4	Knob, Plastic	71294	15	Fastener, Cable	71372	24	Cable, Drive	71036
7	Locknut	15x116	16	Engine Stop Cable	672126			
8	Screw	3x144	19	Screw	26x268			
9	Throttle Control	672141	20	Clamp	42294			