


MODEL 20606x50F


REPAIR PARTS

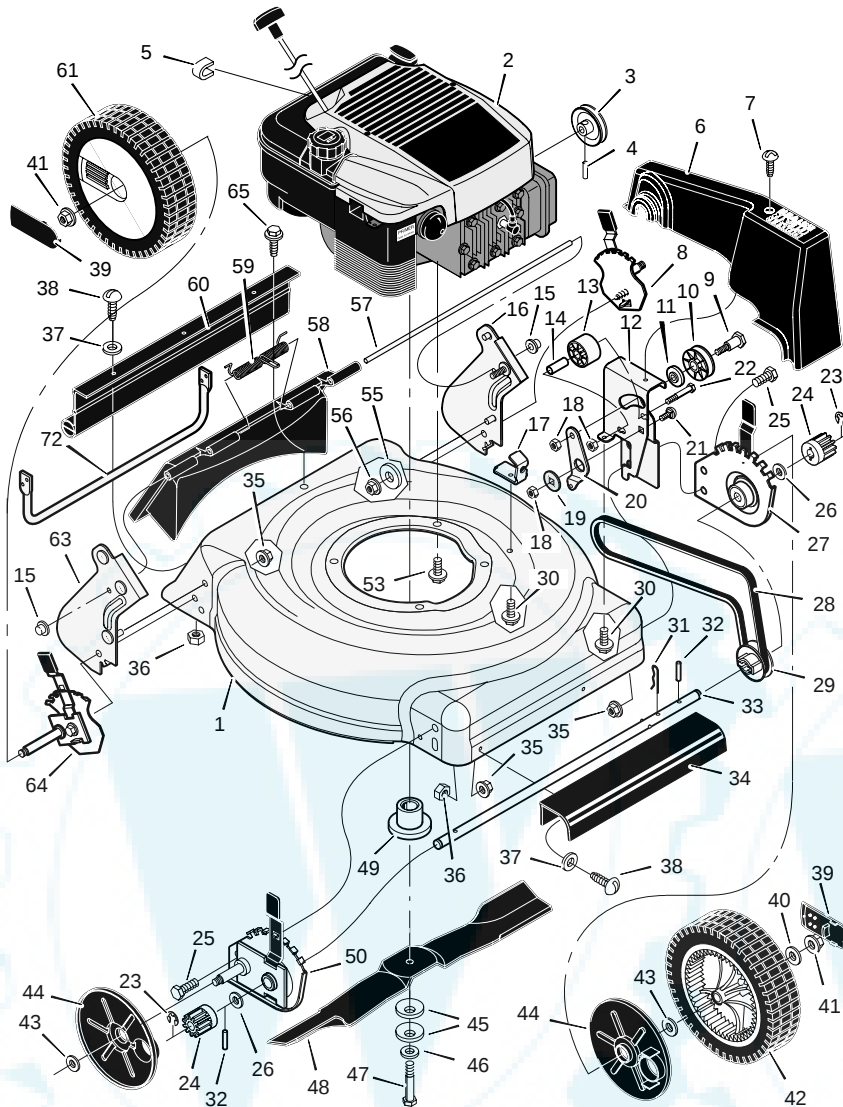

1	Housing		15	Nut, Push	28x49	28	Belt	37x99
2	Engine *	*	16	Bracket, Left Handle	672591E700	29	Pulley, Axle	71791
3	Pulley, Engine	71434	17	Bracket, Cable	671934	30	Screw	26x263
4	Pin, Spring	32x64	18	Nut, Hex	15x43	31	Pin, Hair	31x9
6	Cover, Belt (Gray)	672000	19	Spacer	71789	32	Pin, Spring	43629
7	Screw	26x279	20	Arm, Idler	671936	33	Axle	671931
8	Adjuster, Left Height	672605	21	Bolt, Carriage	2x53	34	Cover, Axle (Gray)	672108
9	Bolt, Shoulder	9x50	22	Bolt, Shoulder	1x81	35	Nut, Flange	15x68
10	Pulley	71779	23	E-Ring	11x16	36	Nut, Hex	15x102
11	Spacer	71788	24	Gear, Pinion	71792	37	Washer	17x38
12	Bracket, Idler Support	672772 Z	25	Bolt	1x85	38	Screw	4x21
13	Pulley, Idler	71778	26	Washer	17x186	39	Cap, Hub	672122
14	Bearing	71793	27	Adjuster, Left Frt. Height	672603	40	Washer	17x169
						41	Nut, Flange	15x84
						42	Wheel, Drive	43617
						43	Washer	17x120
						44	Cover, Dust	71780
						45	Washer, Belleville	17x137
						46	Washer	17x124
						47	Bolt	1x153
						48	Blade	672763E701
						49	Adapter, Blade	672503
						50	Adjuster, Right Frt. Height	672602
						53	Bolt, Engine	25x6
						55	Washer	17x146
						56	Nut, Flange	15x88
						57	Rod, Pivot	215x17 Z
						58	Door, Rear (Gray)	672612
						59	Spring	166x44
						60	Deflector, Rear	671970
						61	Wheel, Rear	43618
						63	Bracket, Right Handle	672590E700
						64	Adjuster, Right Height	672604
						65	Screw	26x245
						72	Guard, Rear	671990
						--	Instruction Book	F-99437

MODEL 20606x50F

REPAIR PARTS

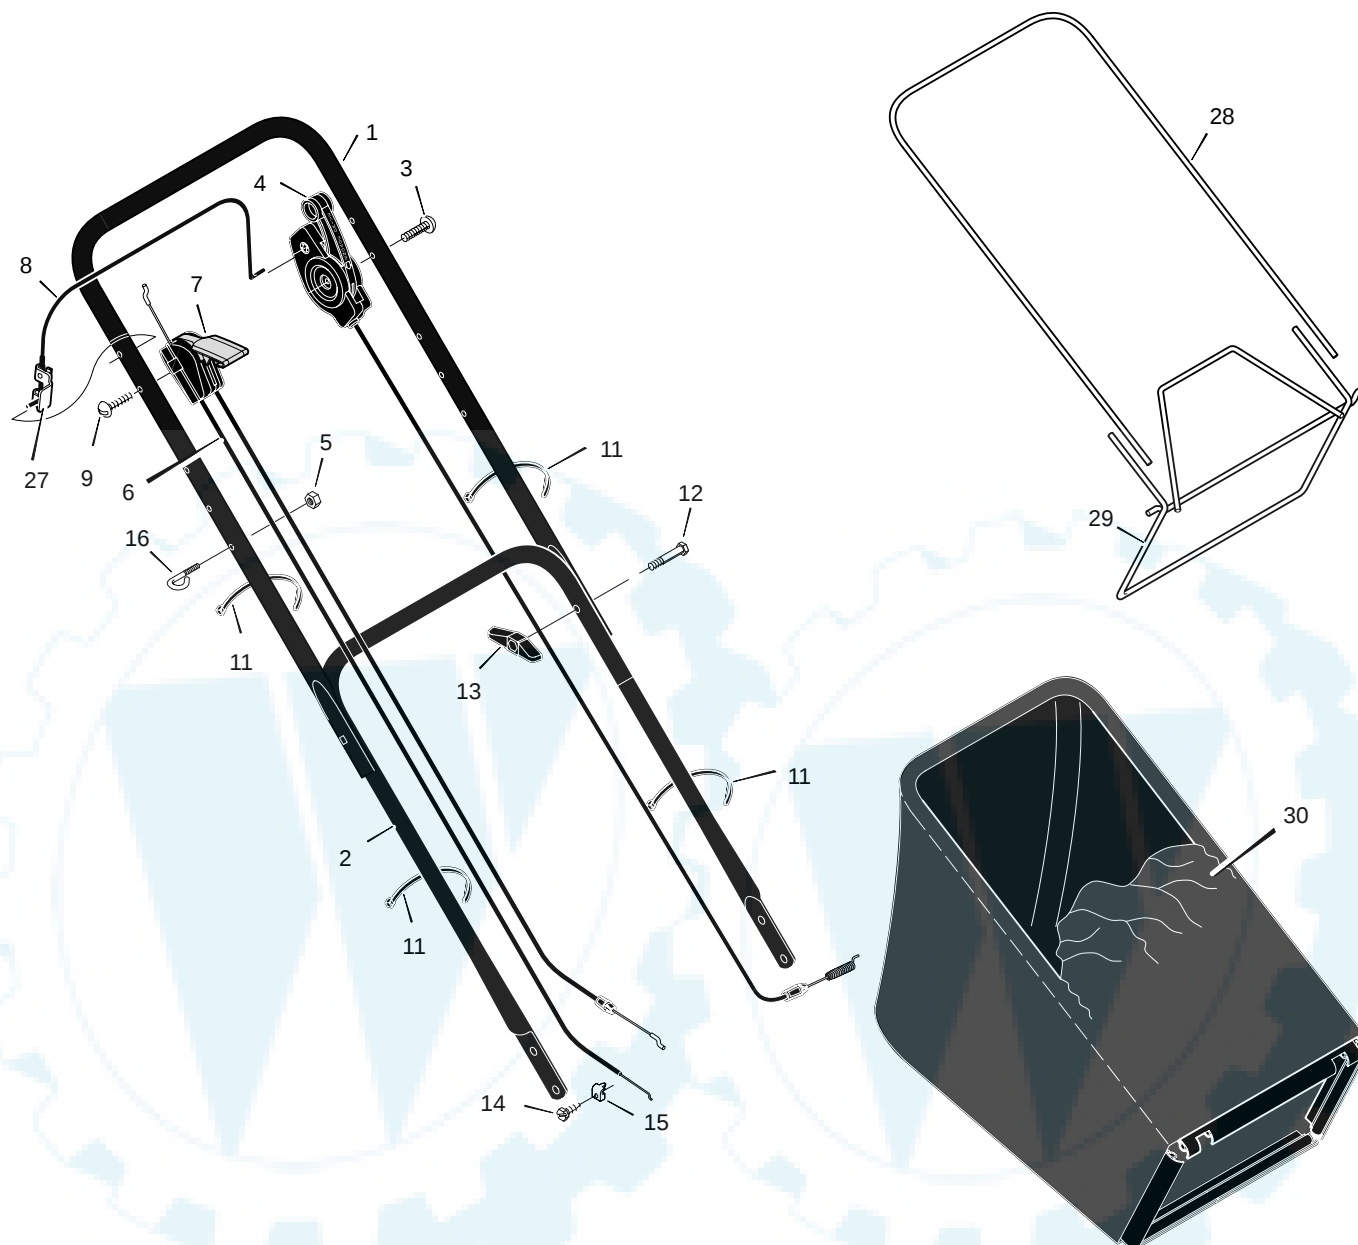

1	Handle, Upper (Gray)	672665E724	8	Engine Stop Lever	672570E701	16	Guide, Rope	43956
2	Handle, Lower (Black)	671917E724	9	Screw	25x14	27	Bracket, Stop Lever	43628 BC
3	Bolt	26x286	11	Fastener, Cable	71372	28	Frame, Top	71592
4	Control, Drive	672580	12	Bolt	2x77	29	Frame Assembly	672614
5	Locknut	15x116	13	Knob	71294	30	Bag, Cloth	672110
6	Cable, Stop	672664	14	Screw	26x268			
7	Throttle Control	672144	15	Clamp	42294			