


MODEL 30560x51B

REPAIR PARTS BODY CHASSIS

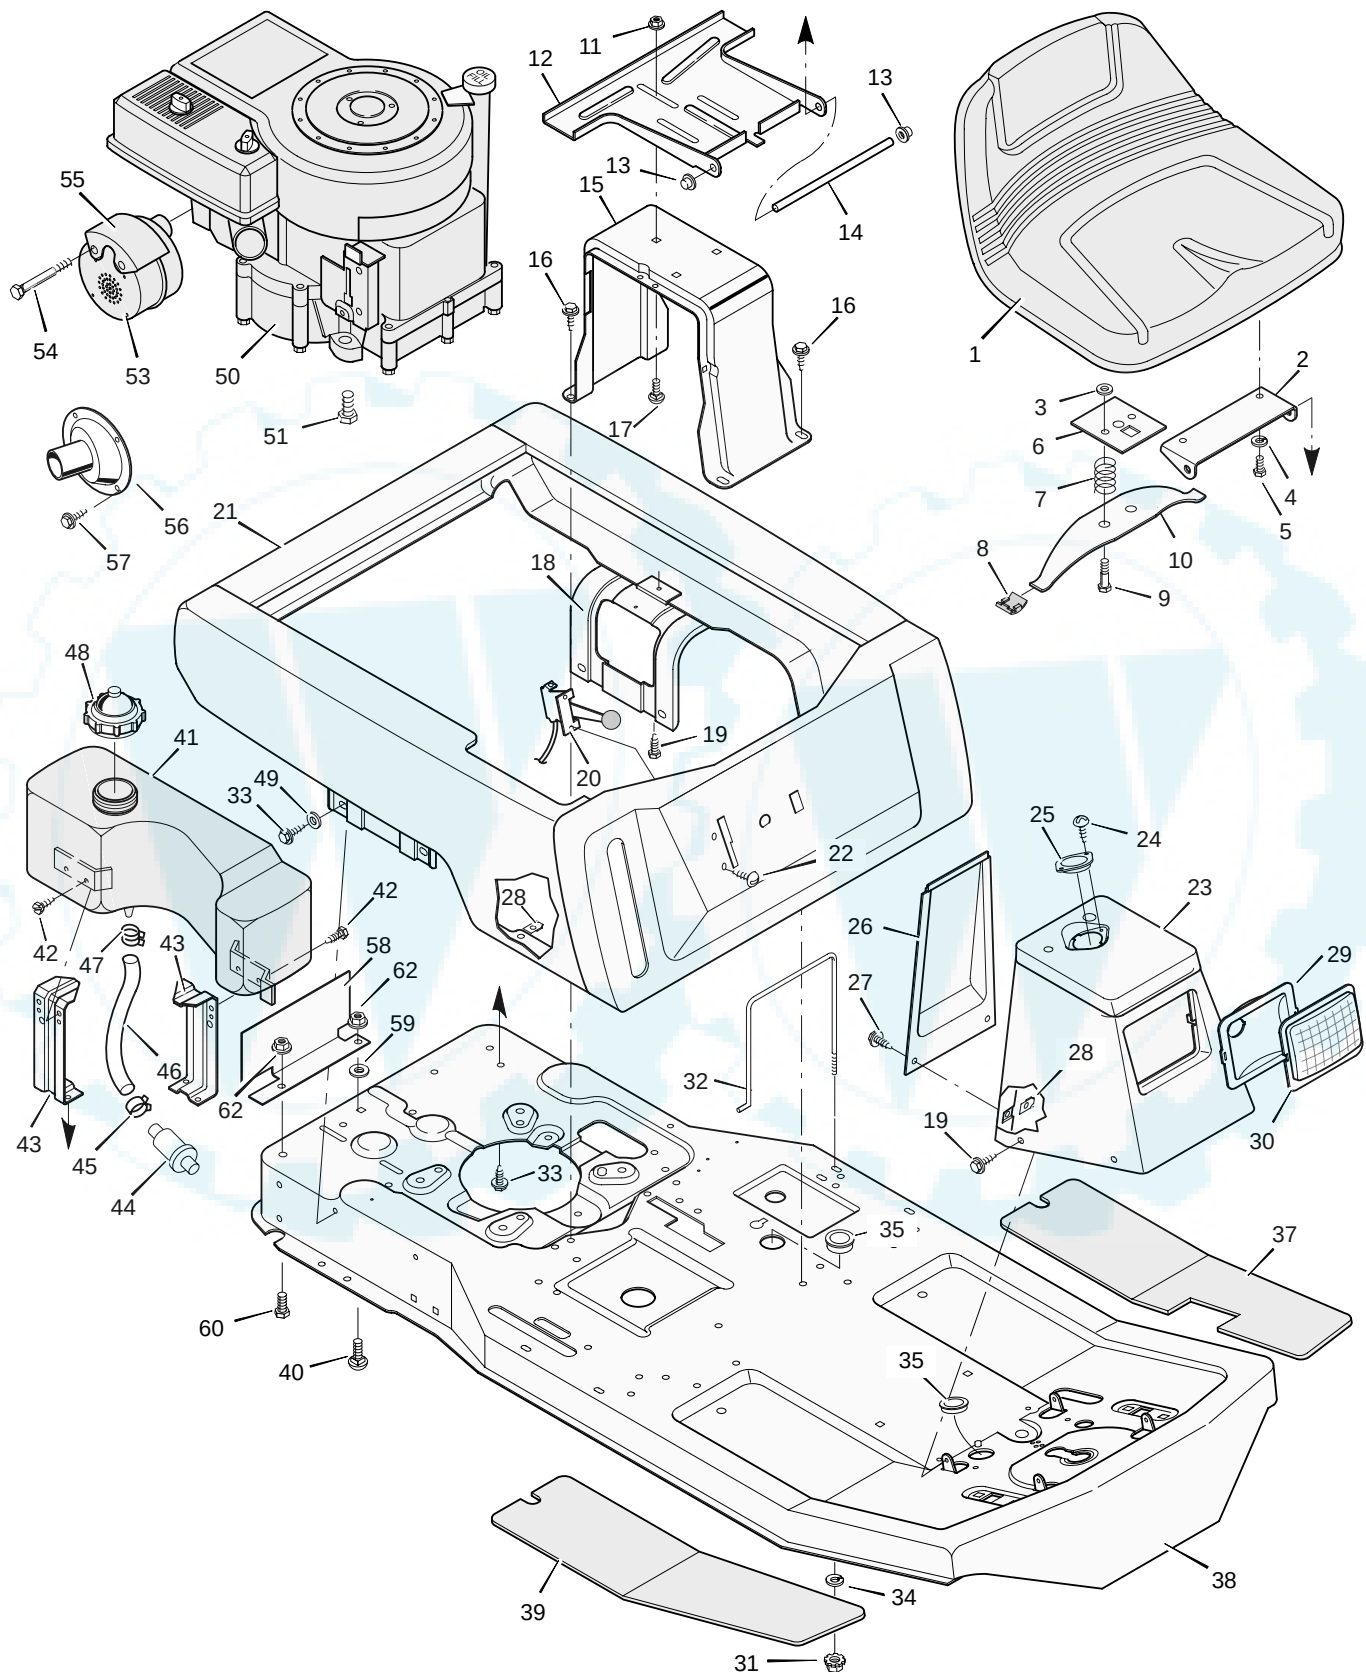

MODEL 30560x51B

REPAIR PARTS BODY CHASSIS


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat	92387	35	Grommet	21268
2	Hinge, Seat	56516E700	37	Mat, Left	56107
3	Retainer	28x64	38	Frame Assembly	56611E700
4	Lockwasher	18x16	39	Mat, Right	56106
5	Bolt, Hex	1x45	40	Bolt, Carriage	2x53
6	Plate, Seat Switch	91963	41	Tank, Fuel	55805
7	Spring, Compression	164x26	42	Screw	26x213
8	Glide, Seat Spring	91822	43	Bracket, Fuel Tank	55806E700
9	Bolt, Shoulder	9x38	44	Filter, Fuel	56002
10	Spring, Seat	91964	45	Clamp	91174
11	Locknut, Flange	15x88	46	Line, Fuel	91022
12	Bracket, Seat Pivot	56518E700	47	Clamp	23713
13	Cap, Push On	28x23	48	Cap, Fuel	92317
14	Rod, Seat Hinge	56537 Z	49	Washer	19x6
15	Support, Seat	56517E700	50	Engine	‡
16	Screw	26x249	51	Bolt, Engine Mount	25x7
17	Bolt, Carriage	2x53	53	Muffler	90330
18	Support, Body *	55017E700	54	Bolt	1x118
19	Screw	26x214	55	Shield, Heat	90332
20	Throttle Control	56599	56	Deflector, Exhaust	92144
21	Body	54766E245	57	Screw	26x208
22	Screw	26x201	58	Shield, Heat	56636E700
23	Console Assembly	56570E245	59	Washer	28x64
24	Screw	26x201	60	Bolt	1x91
25	Bearing, Steering Post	56022	62	Locknut, Flange	15x76
26	Console, Plate	55023E700	—	Owner's Manual	F-98608
27	Screw	4x24	—	Owner's Manual	F-98609
28	J-Nut	28x18	—	Parts List	F-98610
29	Reflector	56241 Z	—	Decal, Right Panel	44x7716
30	Lens	90082	—	Decal, Left Panel	44x7717
31	Locknut	15x66	—	Decal, Front Console	44x6656
32	Clamp, Battery	54800 Z	—	Decal, Shift	44x4402
33	Screw	26x49	—	Decal, Warning	44x6816
34	Washer	17x38			

* Also included with Key No. 21.

‡ Parts are available from a Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory

MODEL 30560x51B

**REPAIR PARTS
MOTION DRIVE**

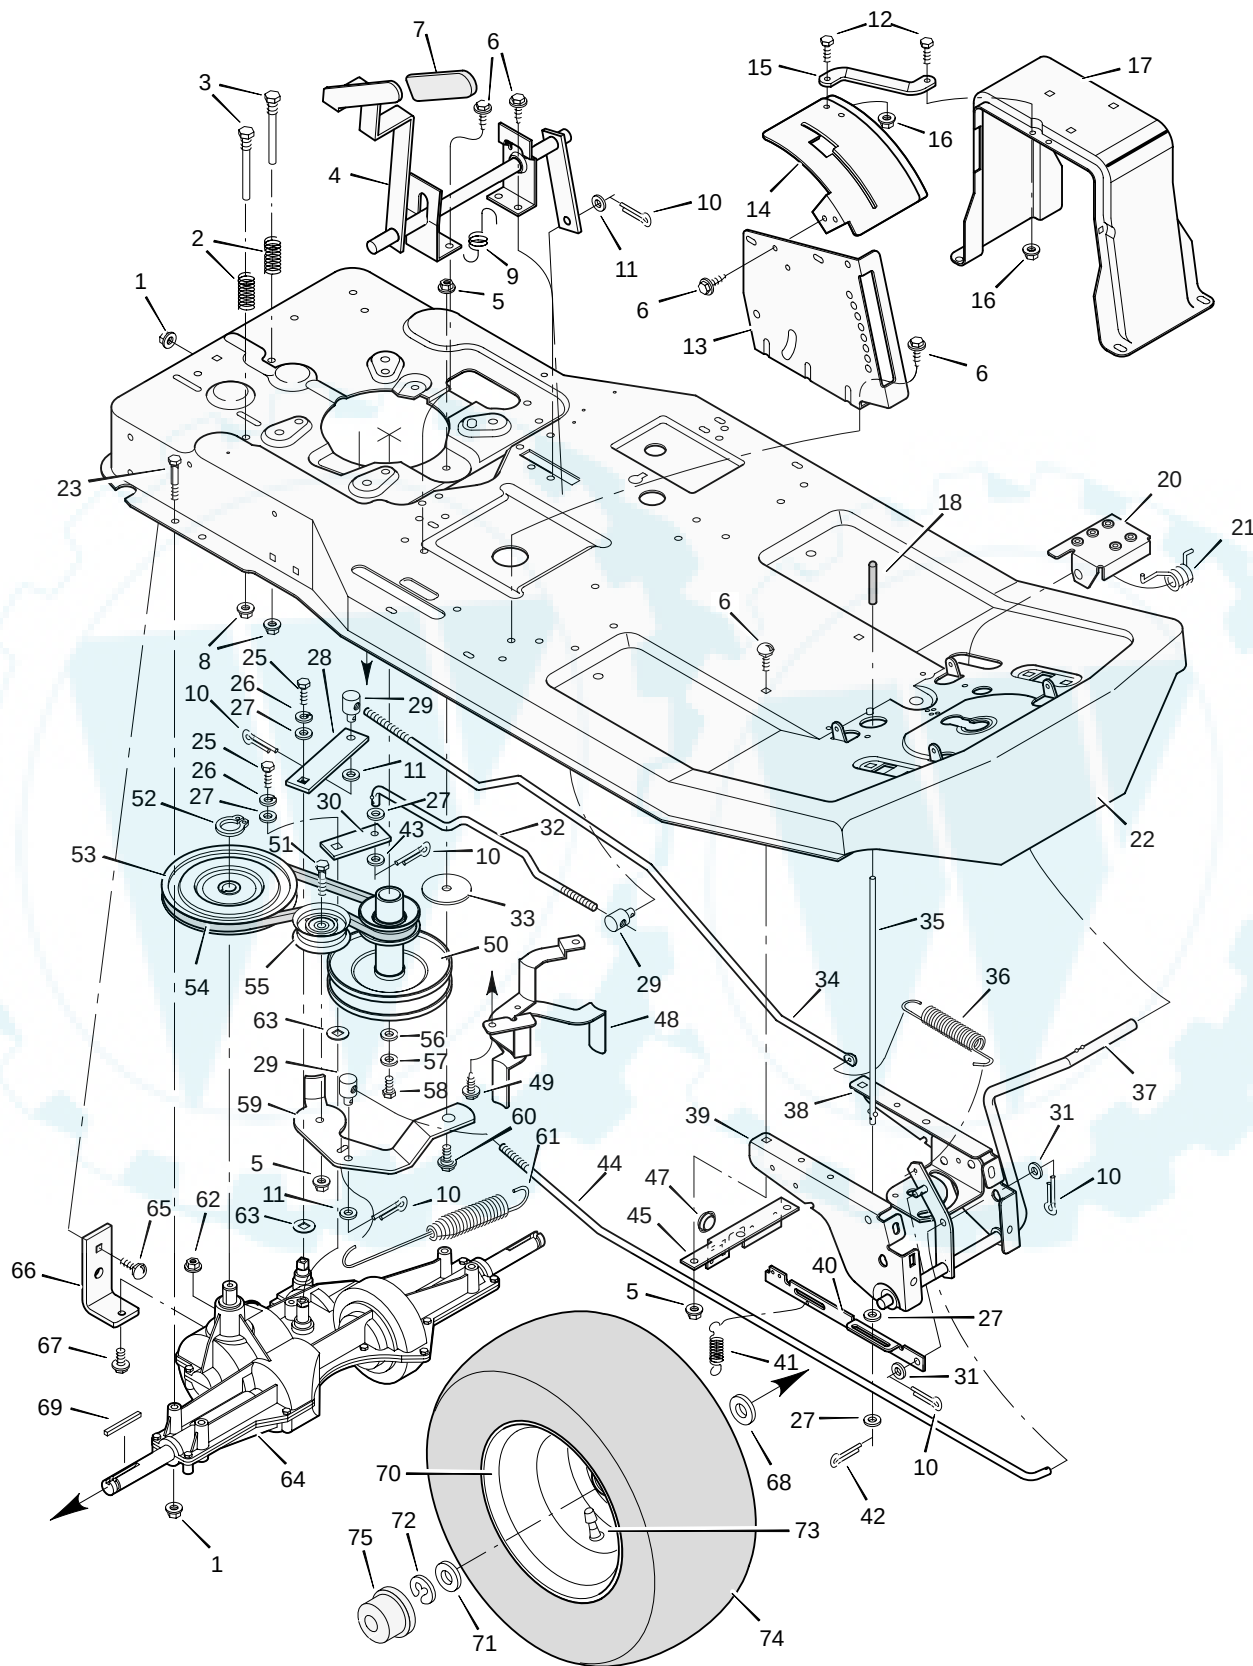

MODEL 30560x51B

REPAIR PARTS MOTION DRIVE


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Locknut, Flange	15x88	39	Plate, Right Suspension	56023E700
2	Spring, Compression	164x1	40	Link, Parking Brake	56565 Z
3	Guide, Belt	55826	41	Spring, Extension	165x107
4	Shifter Assembly	56610E701	42	Pin, Cotter	30x50
5	Locknut, Flange	15x84	43	Washer	17x46 Z
6	Screw	26x267	44	Rod, Clutch	56531 Z
7	Grip, Shift Lever	91573	45	Stop, Parking Brake	56227E700
8	Hex Nut	15x115	47	Grommet	56623
9	Spring, Extension	165x100	48	Guide, Belt	56215 Z
10	Pin, Cotter	30x20	49	Screw	26x49
11	Washer	17x53 Z	50	Pulley Assembly, Stack	92504 Z
12	Bolt, Hex	1x38	51	Bolt, Hex	1x111
13	Plate, Index	56595E700	52	Ring, Retainer	11x7
14	Gate, Shift	56606E700	53	Pulley, Drive	56562
15	Brace, Shift Gate	56529E700	54	Belt, Motion Drive	37x65
16	Locknut, Flange	15x89	55	Pulley, Idler	56526
17	Support, Seat	56517E700	56	Washer	17x170
18	Grip, Parking Brake	55873	57	Lockwasher	19x35
20	Pedal	56409E700	58	Bolt, Hex	1x140
21	Spring	165x81	59	Bracket, Idler	56520E700
22	Frame Assembly	56611E700	60	Bolt, Shoulder	9x42
23	Bolt, Hex	1x124	61	Spring, Extension	165x81
25	Bolt, Hex	1x145	62	Locknut, Hex	15x43
26	Lockwasher	18x32	63	Washer	17x148
27	Washer	17x36	64	Transaxle, Dana Model 4450-1	‡
28	Yoke, Brake	56500 Z	65	Bolt, Carriage	2x53
29	Nut, Adjusting	21920	66	Bracket, Transaxle	56503 Z
30	Yoke, Shift	56505 Z	67	Bolt, Hex	1x139
31	Washer	17x47 Z	68	Washer	17x160
32	Rod, Shift	56591 Z	69	Key, Square	56534
33	Washer, Hardened	17x174 Z	70	Wheel & Tire Assembly	92308-601
34	Rod, Brake	56530 Z	71	Washer	17x195
35	Rod, Parking Brake	56566 Z	72	E-Ring	11x3
36	Spring, Extension	165x85	73	Valve Stem **	24373
37	Lever, Pedal	56511E700	74	Tire Only **	24393
38	Plate, Left Suspension	56224E700	75	Hub Cap, Optional	94618


‡ Parts are available from a Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory

** Also included with Key No. 70.

MODEL 30560x51B

**REPAIR PARTS
STEERING**

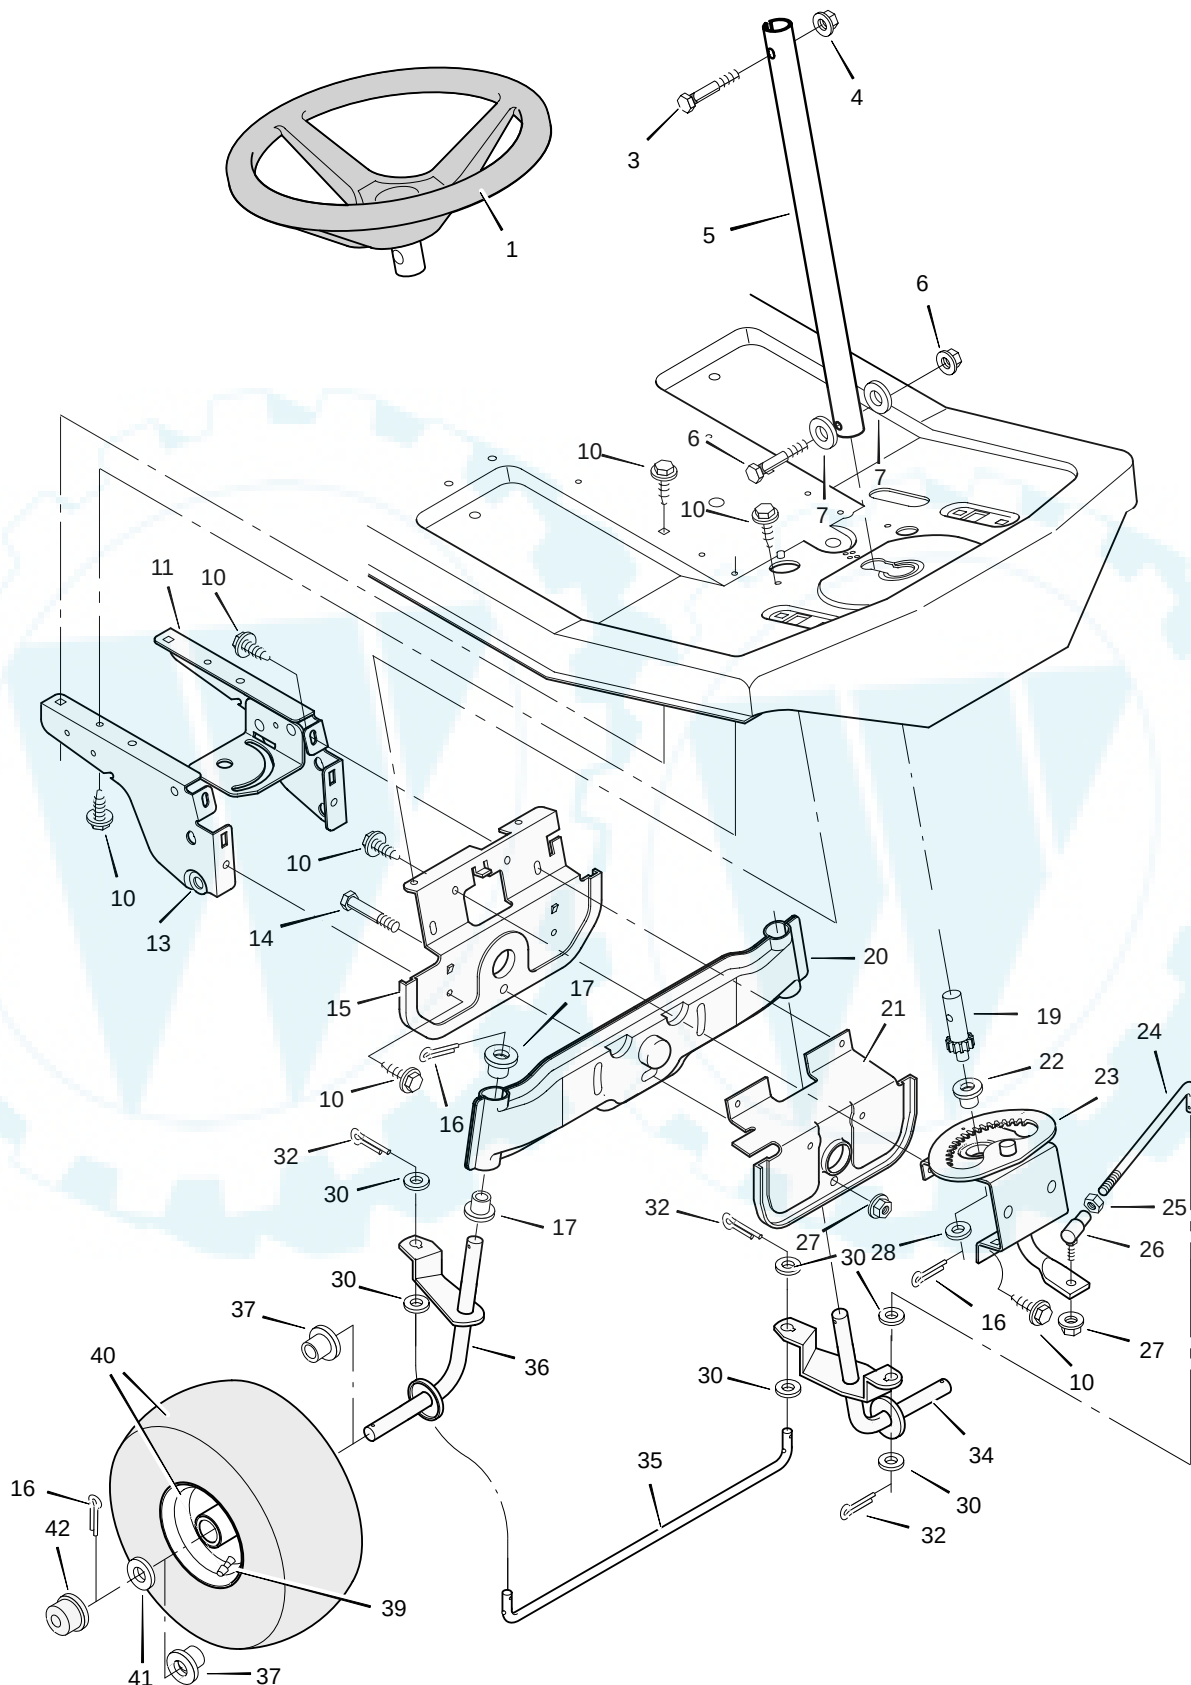

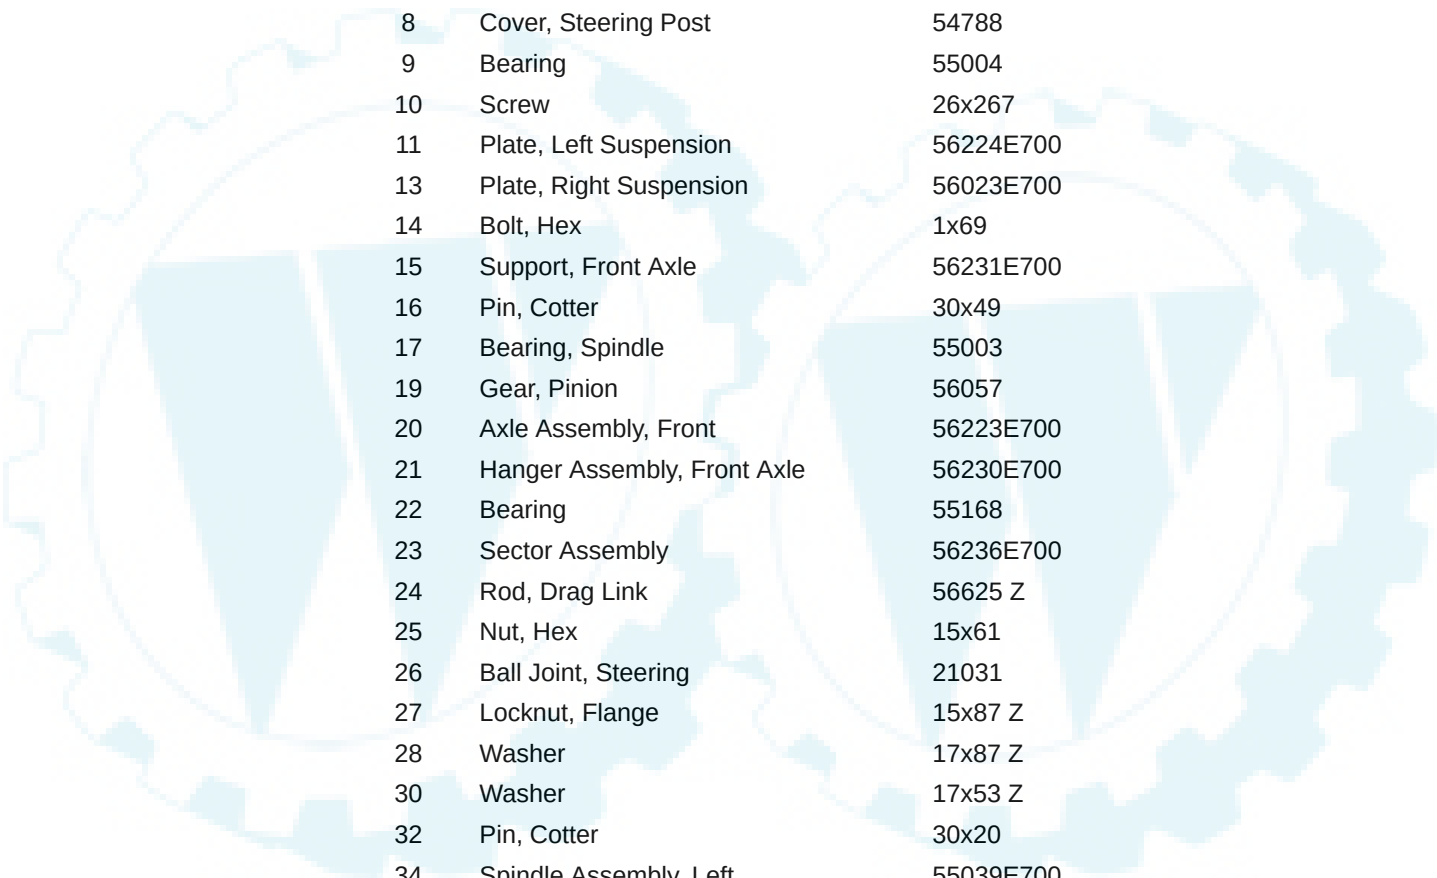
MODEL 30560x51B**REPAIR PARTS
STEERING**


Key No.	Description	Part No.
1	Steering Wheel	92078
2	Bellows	54789
3	Bolt, Hex	1x102
4	Locknut, Flange	15x88
5	Post, Steering	91444C
6	Nut, Hex	15x88
7	Washer	17x47 Z
8	Cover, Steering Post	54788
9	Bearing	55004
10	Screw	26x267
11	Plate, Left Suspension	56224E700
13	Plate, Right Suspension	56023E700
14	Bolt, Hex	1x69
15	Support, Front Axle	56231E700
16	Pin, Cotter	30x49
17	Bearing, Spindle	55003
19	Gear, Pinion	56057
20	Axle Assembly, Front	56223E700
21	Hanger Assembly, Front Axle	56230E700
22	Bearing	55168
23	Sector Assembly	56236E700
24	Rod, Drag Link	56625 Z
25	Nut, Hex	15x61
26	Ball Joint, Steering	21031
27	Locknut, Flange	15x87 Z
28	Washer	17x87 Z
30	Washer	17x53 Z
32	Pin, Cotter	30x20
34	Spindle Assembly, Left	55039E700
35	Rod, Tie	55026 Z
36	Spindle Assembly, Right	55038E700
37	Bearing, Wheel *	56105
38	Tire	55700
39	Valve Stem *	24373
40	Wheel & Tire Assembly	92303-601
41	Washer	17x197
42	Cap, Hub (Optional)	94618

* Also included with Key No. 40.

MODEL 30560x51B

**REPAIR PARTS
MOWER HOUSING SUSPENSION**

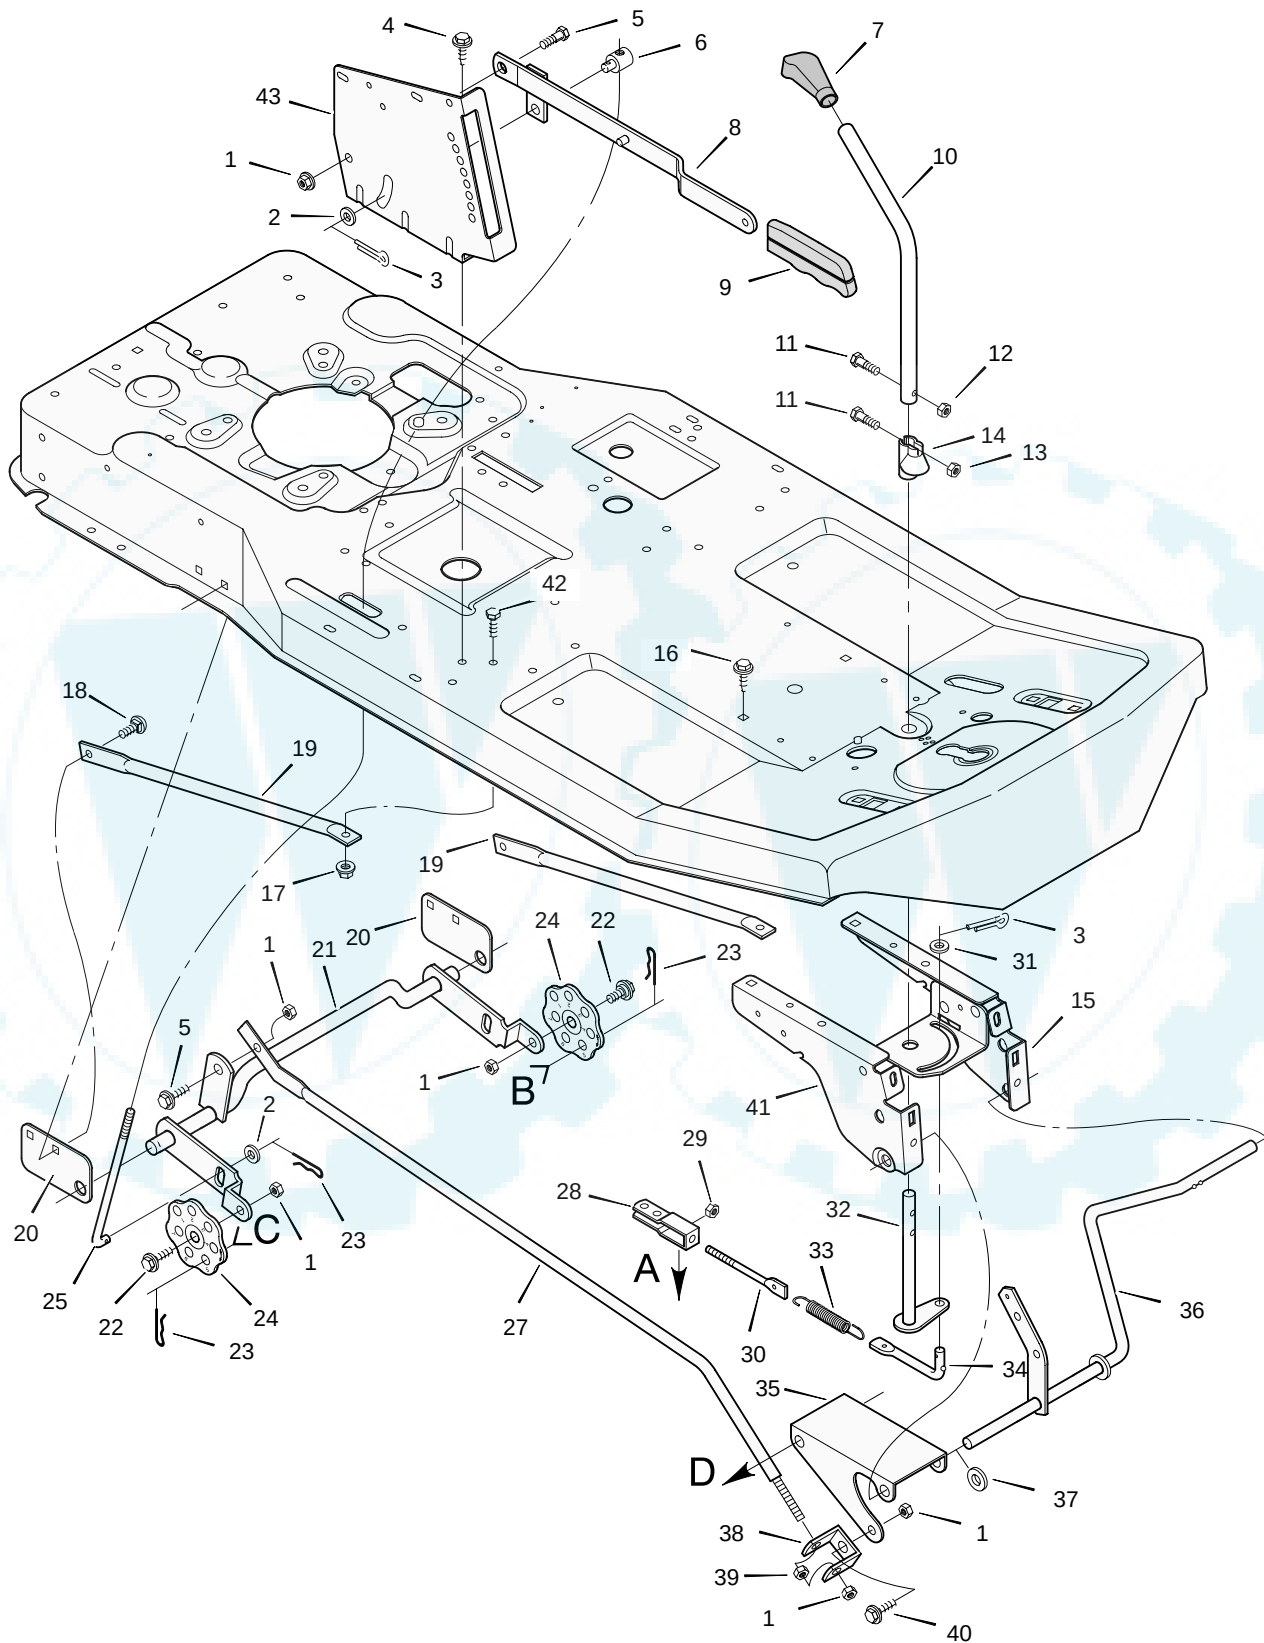


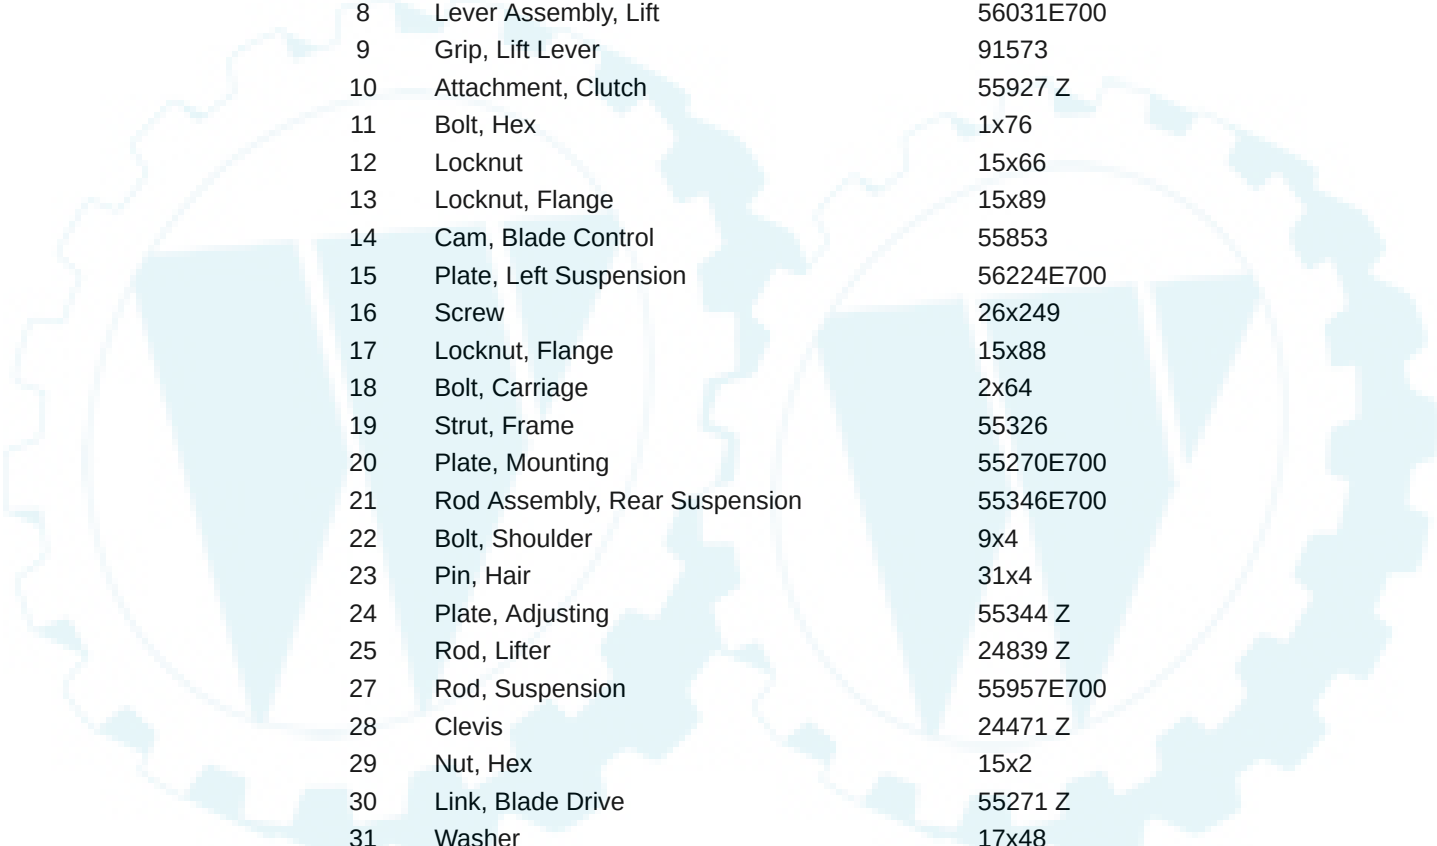MODEL 30560x51B**REPAIR PARTS
MOWER HOUSING SUSPENSION**

Key No.	Description	Part No.
1	Locknut, Flange	15x84
2	Washer	17x53 Z
3	Pin, Cotter	30x20
4	Screw	26x249
5	Bolt, Shoulder	9x9 Z
6	Nut, Adjusting	21920
7	Grip, Blade Control	92698
8	Lever Assembly, Lift	56031E700
9	Grip, Lift Lever	91573
10	Attachment, Clutch	55927 Z
11	Bolt, Hex	1x76
12	Locknut	15x66
13	Locknut, Flange	15x89
14	Cam, Blade Control	55853
15	Plate, Left Suspension	56224E700
16	Screw	26x249
17	Locknut, Flange	15x88
18	Bolt, Carriage	2x64
19	Strut, Frame	55326
20	Plate, Mounting	55270E700
21	Rod Assembly, Rear Suspension	55346E700
22	Bolt, Shoulder	9x4
23	Pin, Hair	31x4
24	Plate, Adjusting	55344 Z
25	Rod, Lifter	24839 Z
27	Rod, Suspension	55957E700
28	Clevis	24471 Z
29	Nut, Hex	15x2
30	Link, Blade Drive	55271 Z
31	Washer	17x48
32	Rod and Arm Assembly	55930E700
33	Spring, Extension	165x67
34	Link, Front Deck	55179 Z
35	Bracket, Front Suspension	55139E700
36	Lever, Pedal	56511E700
37	Washer	17x122 Z
38	Clevis	55298
39	Locknut, Hex	15x73
40	Bolt, Shoulder	9x17
41	Plate, Right Suspension	56023E700
42	Bolt, Hex	1x45
43	Plate, Index	56595E700

MODEL 30560x51B

**REPAIR PARTS
MOWER HOUSING**

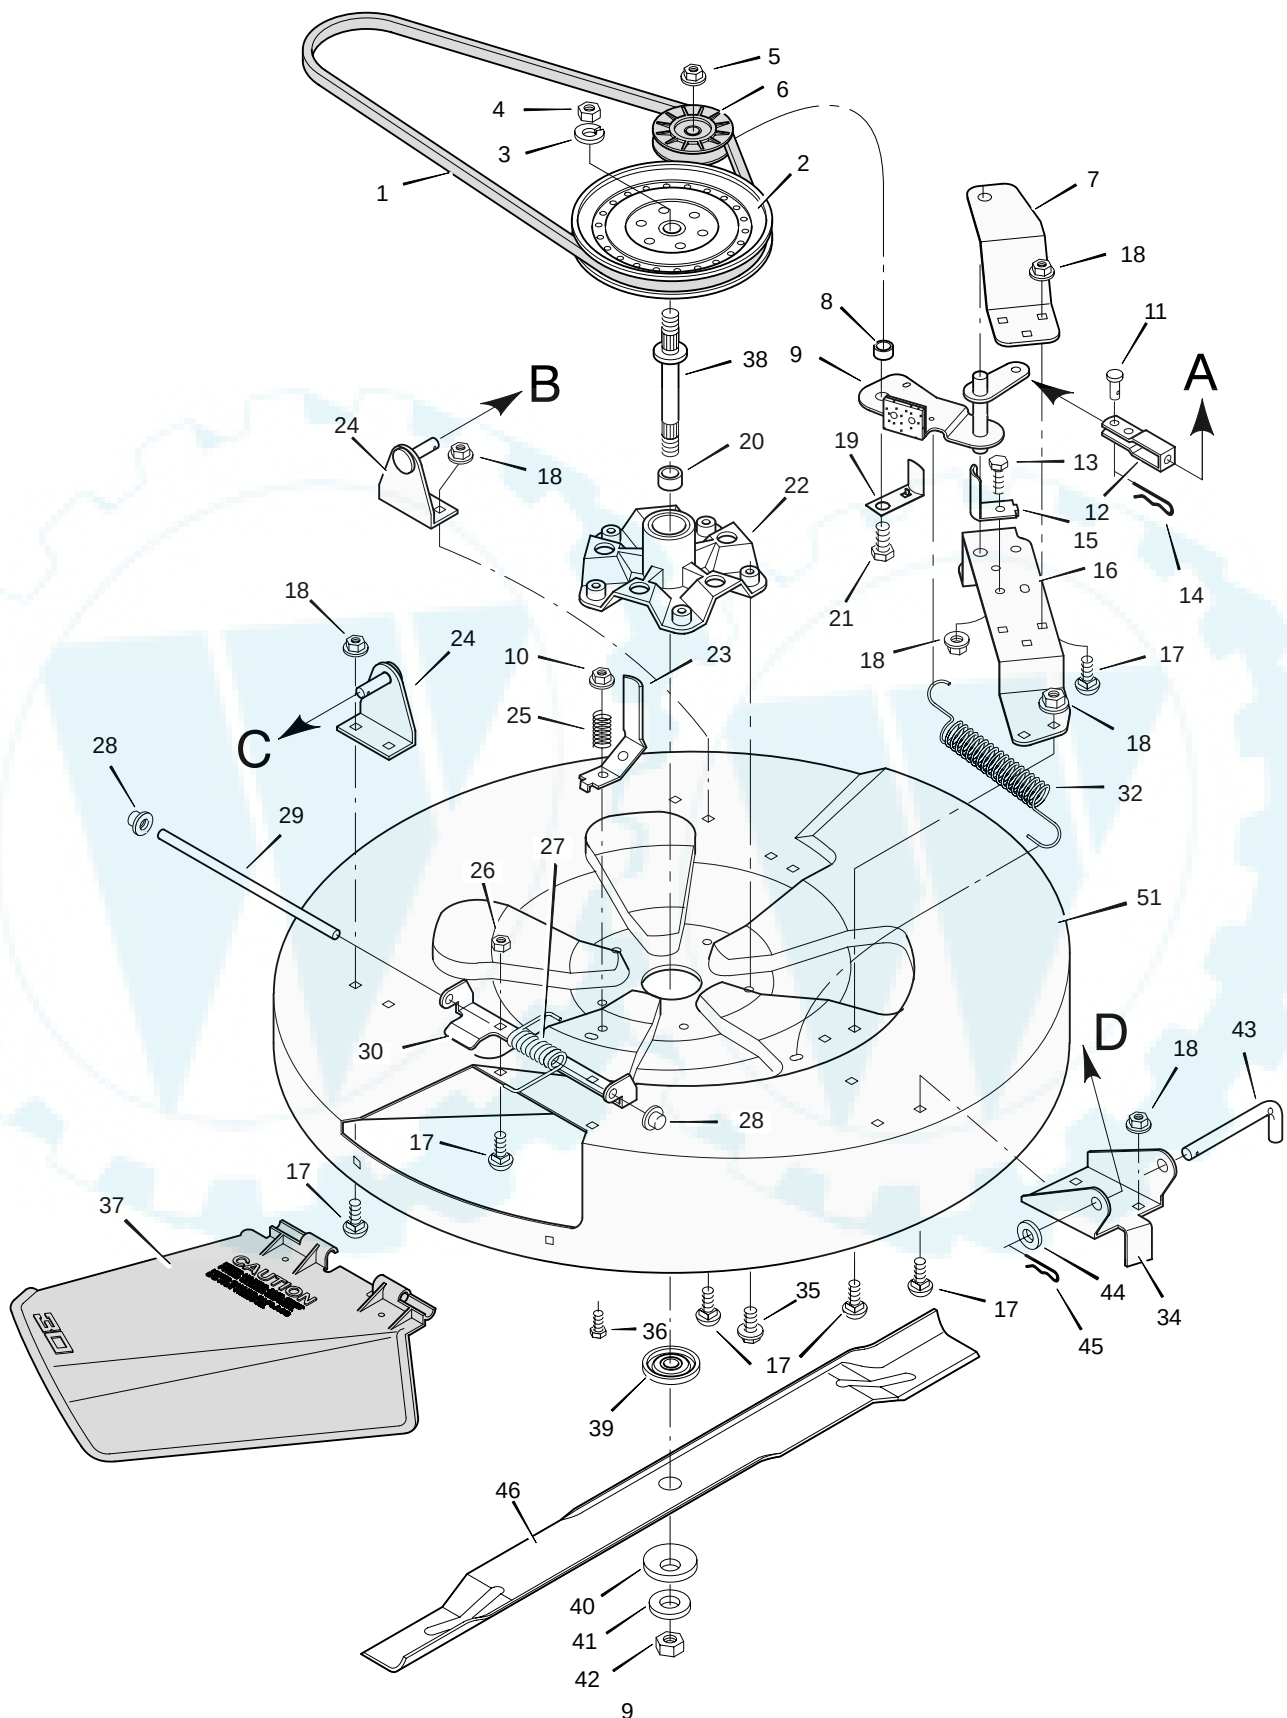

MODEL 30560x51B



REPAIR PARTS MOWER HOUSING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Belt, Mower Drive	37x57	24	Bracket, Hanger	55974E700
2	Pulley, Splined	91951	25	Spring, Compression	164x1
3	Lockwasher	18x33	26	Nut, Hex	15x43
4	Locknut, Hex	15x100	27	Spring, Torsional	166x4
5	Nut, Hex	15x41	28	Push On Cap	28x23
6	Pulley, Idler	91178	29	Rod	21197 Z
7	Bracket, Upper Idler	55921E701	30	Hinge, Chute Deflector	56213E700
8	Spacer	55895	32	Spring, Extension	165x68
9	Assembly, Blade Idler	55979	34	Bracket, Front	55916E700
10	Locknut, Flange	15x88	35	Screw	26x216
11	Pin, Clevis	29x99	36	Bolt, Hex	1x75
12	Clevis	24471 Z	37	Deflector, Chute	55971
13	Bolt, Hex	1x45	38	Mandrel	91921
14	Pin, Hair	31x6	39	Adapter, Blade	92466
15	Guide, Belt	55977	40	Washer, Belleville	17x166
16	Bracket, Lower Idler	55920E701	41	Washer, Hardened	17x165
17	Bolt, Carriage	2x53	42	Nut, Hex	15x100
18	Nut, Flange	15x79	43	Pin, Pull	90828 Z
19	Guide, Belt	55894	44	Washer	17x67 Z
20	Spacer	91925	45	Pin, Hair	31x4
21	Bolt, Hex	1x127	46	Blade, Standard	55793E701
22	Housing, Mandrel	55962	1-51	Mower Housing, Complete	403330
23	Guide, Belt	55956 Z			

MODEL 30560x51B


REPAIR PARTS ELECTRICAL SYSTEM

POS.	FUNCTION	CIRCUIT (MAKE)
1	OFF	M+G
2	RUN LIGHTS	B+L
3	RUN	NONE
4	START	B+S

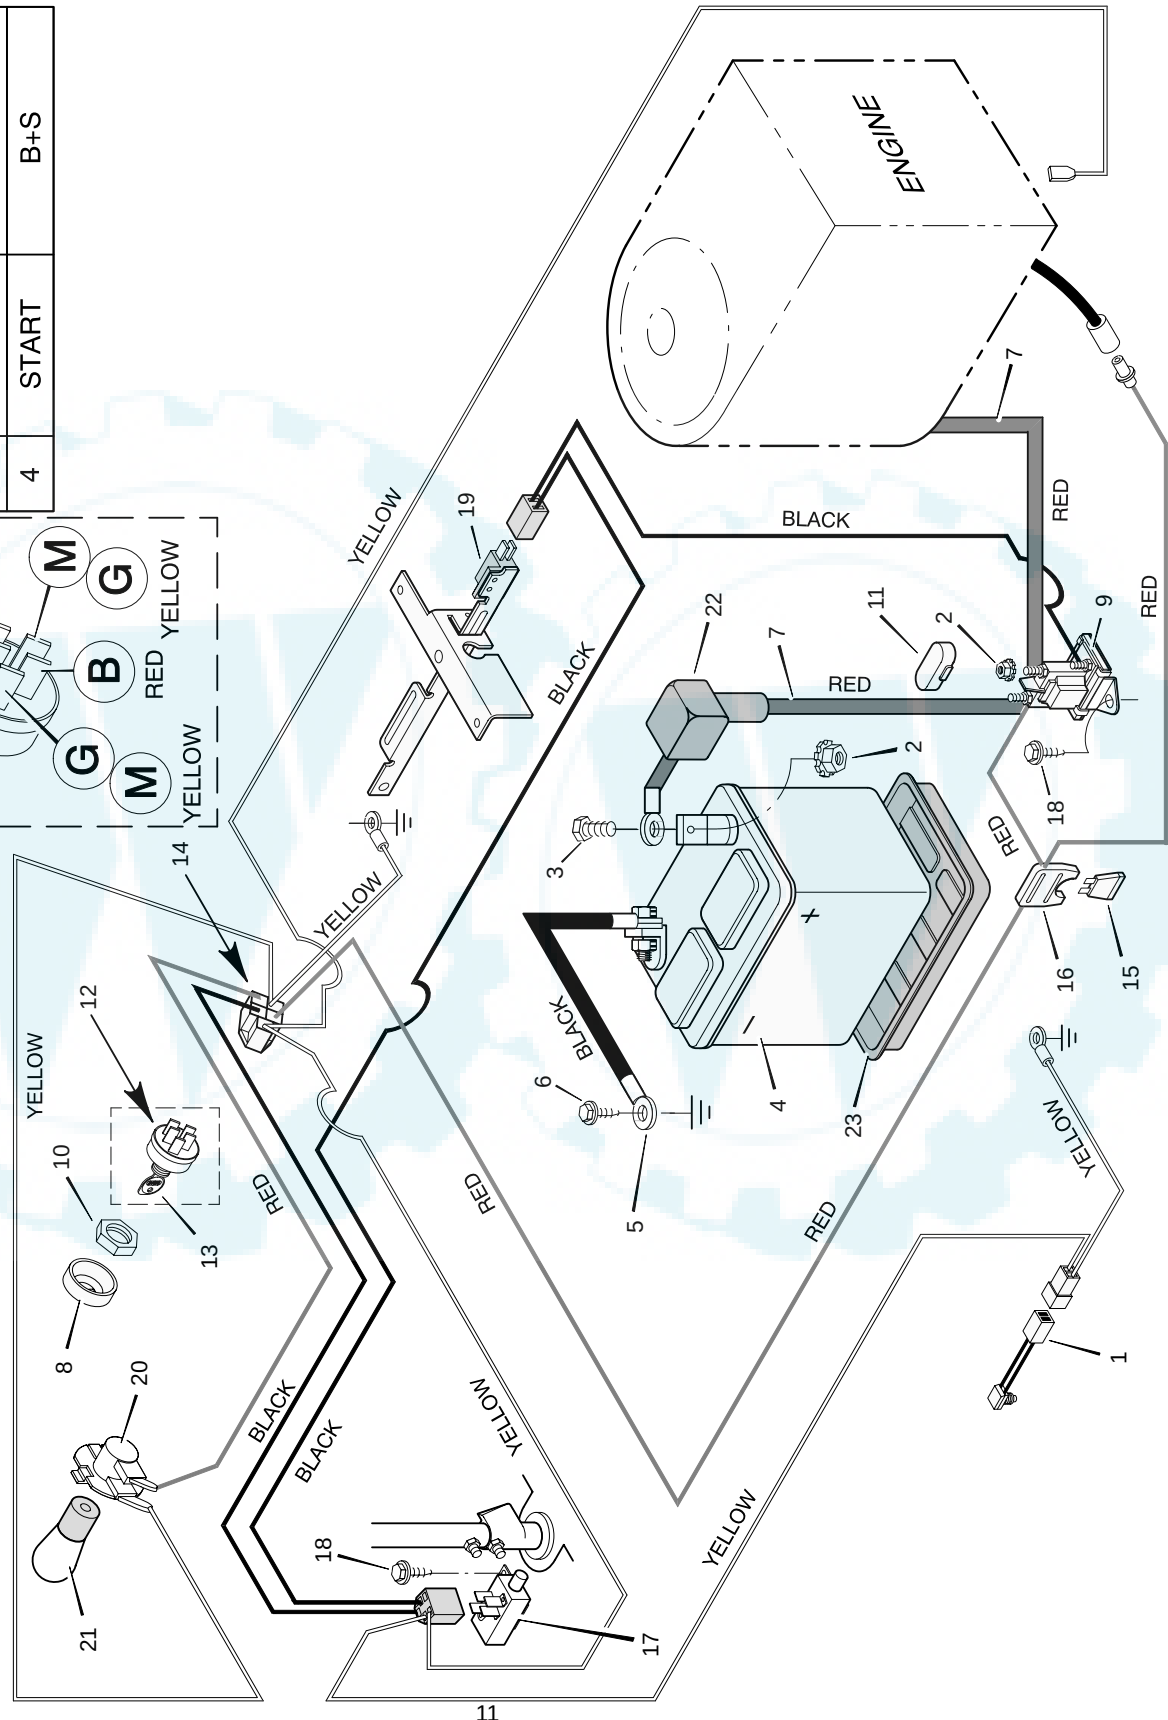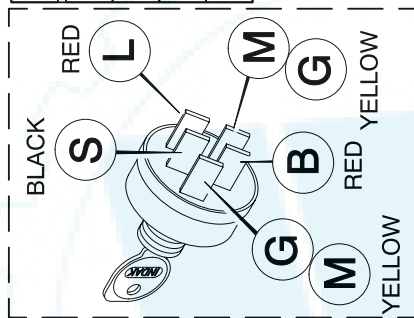

MODEL 30560x51B

**REPAIR PARTS
ELECTRICAL SYSTEM**

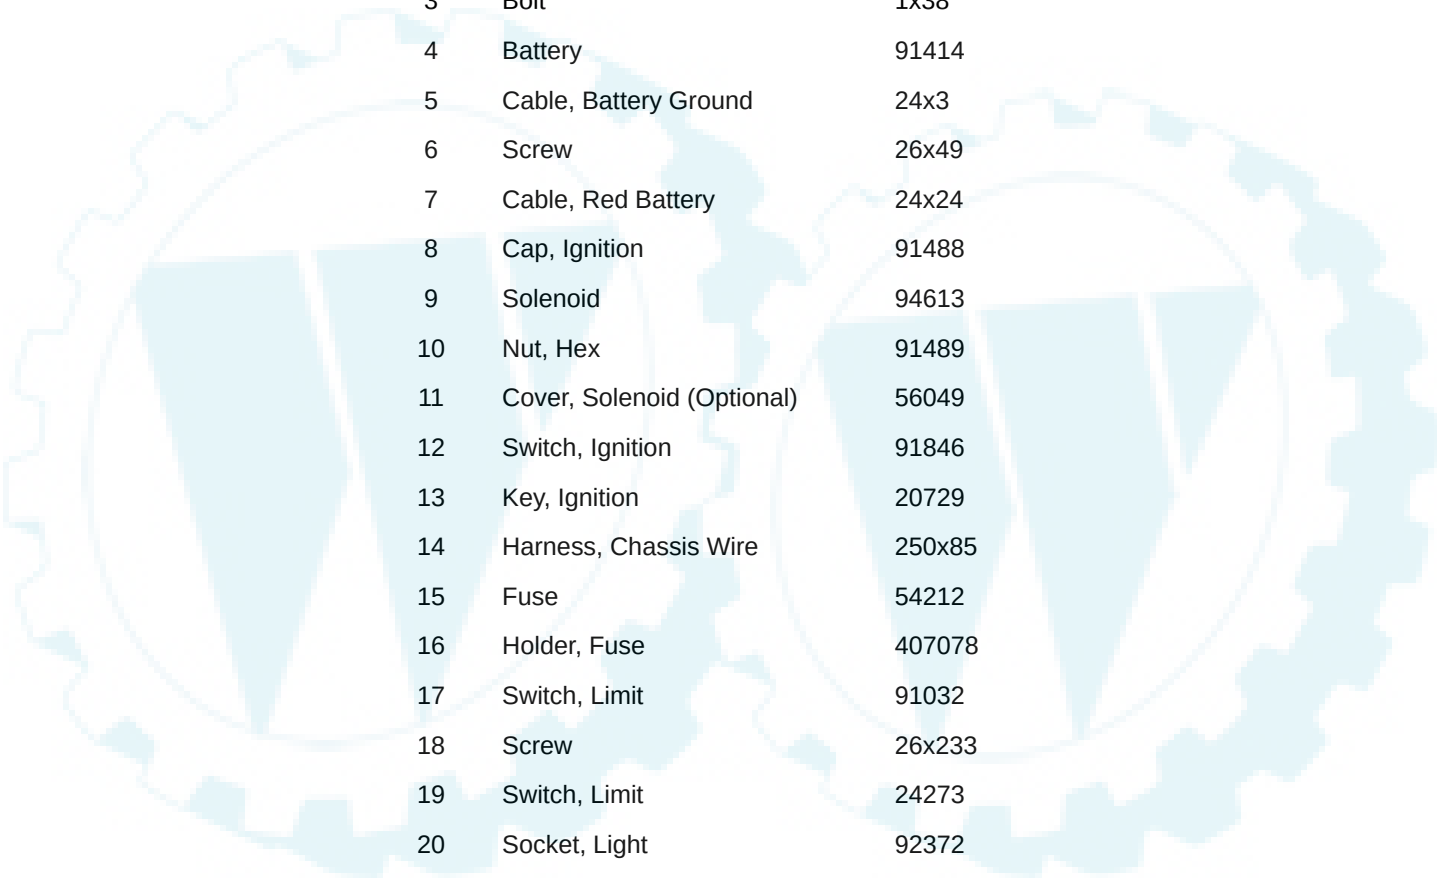

Key No.	Description	Part No.
1	Switch, Seat Sensor	91031
2	Locknut	15x66
3	Bolt	1x38
4	Battery	91414
5	Cable, Battery Ground	24x3
6	Screw	26x49
7	Cable, Red Battery	24x24
8	Cap, Ignition	91488
9	Solenoid	94613
10	Nut, Hex	91489
11	Cover, Solenoid (Optional)	56049
12	Switch, Ignition	91846
13	Key, Ignition	20729
14	Harness, Chassis Wire	250x85
15	Fuse	54212
16	Holder, Fuse	407078
17	Switch, Limit	91032
18	Screw	26x233
19	Switch, Limit	24273
20	Socket, Light	92372
21	Bulb, Light	90084
22	Cover, Terminal	54148
23	Tray, Battery	91896